 
 



Alcoa® One-Piece Hub Cover System (Part No. 086100 / 87100)

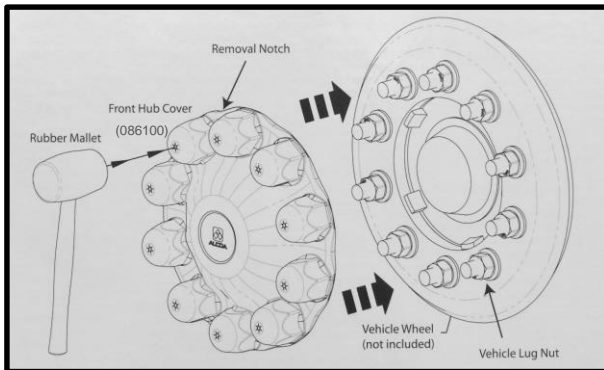

Front Cover Installation +
Removal (086100)

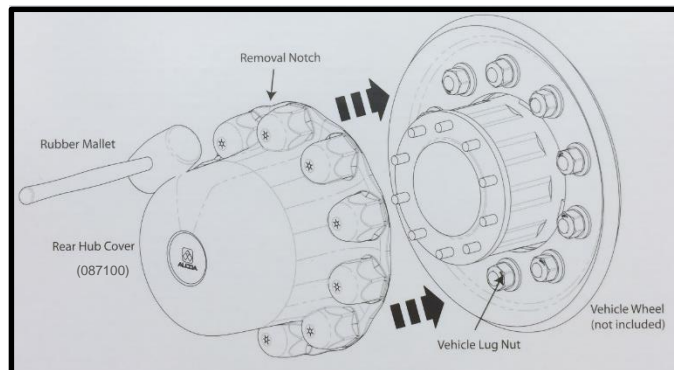

 Rear Cover Installation + Removal
(087100)

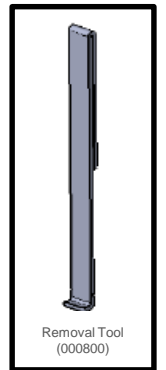

Components: Front hub cover (086100), rear hub cover (087100), and one removal tool (000800).

Instructions:

1. Using a short handle rubber mallet, install the hub cover by hitting cylinder positions with reinforcement springs. Reinforcement springs are visible on back side of the cover around cylinders underneath lug nut features.
2. Continue hitting lug nut features around the circumference of the cap until fully installed. The cap will contact the wheel when fully installed.
3. To remove, locate removal notches between lug nut features. Insert removal tool into notch on side of hub covers. Using the tool with a rotating action begin to separate hub cover away from wheel face and remove tool. Repeat action around rim of cover counterclockwise to complete removal.
4. Visit [youtube.com/AlcoaWheelsNorthAmerica](https://www.youtube.com/AlcoaWheelsNorthAmerica) to view instructional videos for installation.

Keep rolling with us at:

[facebook.com/alcoawheels](https://www.facebook.com/alcoawheels) [alcoawheels](https://www.instagram.com/alcoawheels) [@alcoawheels](https://twitter.com/alcoawheels) [youtube.com/AlcoaWheelsNorthAmerica](https://www.youtube.com/AlcoaWheelsNorthAmerica)



www.alcoawheels.com

Arconic Wheel and Transportation Products

| 1616 Harvard Ave., Cleveland, OH 44105 |

(800) 242-9898

